

# BALL MACHINE — QUICK START GUIDE

## MOVING THE MACHINE

- Tilt the machine BACKWARDS when moving — it has two back wheels and two fixed front legs.
- ⚠️ Never push it forward upright — this risks breaking the fixed front legs.

## POSITIONING ON COURT

- Wheel the machine to the centre of the court at the baseline.
- Use the white plastic strip at the bottom of the machine to align it parallel to the baseline.

## GETTING STARTED

### STEP 1


**Power On:** Press the red **POWER** button. The machine self-calibrates (pivots left/right, then centers). The LCD screen shows "Calibrating... please wait."

### STEP 2

**Set Distance:** Press **TEST** to fire a ball. Use the + / - buttons on the LCD panel to adjust how far the ball travels. Press **TEST** after each change.

### STEP 3

**Select MANUAL Mode:** Press **MANUAL**, then press the **REMOTE** button (below the POWER button). Pick up the remote to begin.

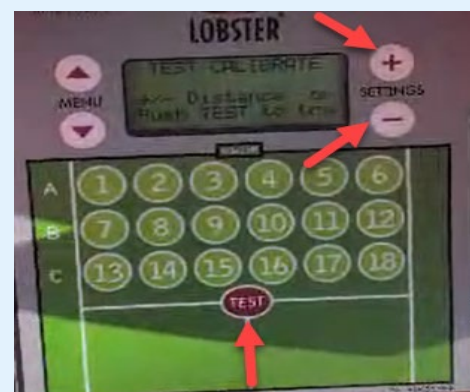

## MANUAL MODE — SIMPLE TRAINING






Manual mode delivers balls to a consistent court position at consistent pace and rhythm — ideal for drilling a specific shot. Adjust your session live using the remote control (see Page 2).

# BALL MACHINE — REMOTE & TIPS

## REMOTE CONTROL GUIDE



*Remote Control*

	<b>START / PAUSE</b> Start and pause the machine.
	<b>SPEED</b> Control how fast the ball travels towards you.
	<b>SPIN</b> Adjust topspin or backspin. Topspin accelerates the ball after bouncing; backspin keeps it shorter.
	<b>INTERVAL</b> Control how frequently each ball is launched.
	<b>TRAJECTORY</b> Adjust the vertical flight angle of the balls.

## BALL HOPPER EMPTY

- When the machine stops throwing balls, press PAUSE on the remote.
- Retrieve all balls from the court.
- Refill the ball hopper and press START to resume.

## QUICK TIPS

- **NEVER STAND IN FRONT OF THE BALL MACHINE**
- Always pause the machine before loading balls into the hopper.
- After your session, return the machine to the club house by wheeling the machine back tilted on its rear wheels.
- Don't forget to affix the remote control back onto the machine.